


DEUTSCHER

TH910

RIDE-ON MOWER

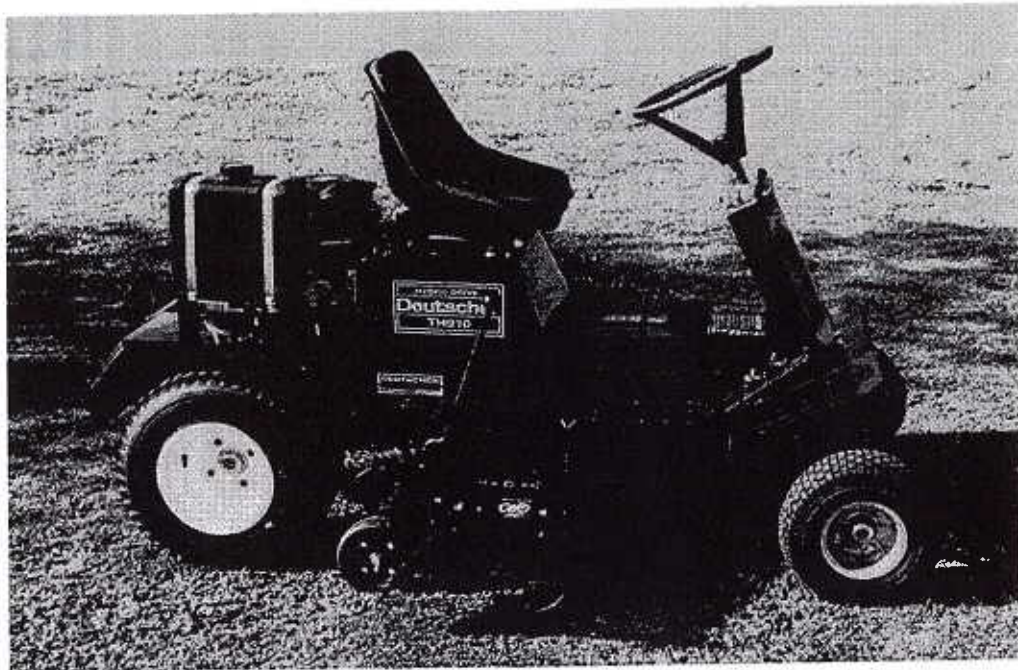

Spare Parts

Manual

A PRODUCT OF AUSTRALIA


Edition No. 2

Part No. T951

**WHEN ORDERING PARTS
SPECIFY THE MODEL AND SERIAL NUMBER
ON THE NAME PLATE OF THE MOWER
AND THE PART NUMBER IN THIS MANUAL**


**THE MANUFACTURERS RESERVE THE RIGHT TO ALTER, CHANGE OR VARY THE
SPECIFICATIONS OF THE MACHINE OR ANY OF THE COMPONENT PARTS
AT ANY TIME WITH OUT NOTICE**

CHASSIS ASSEMBLY

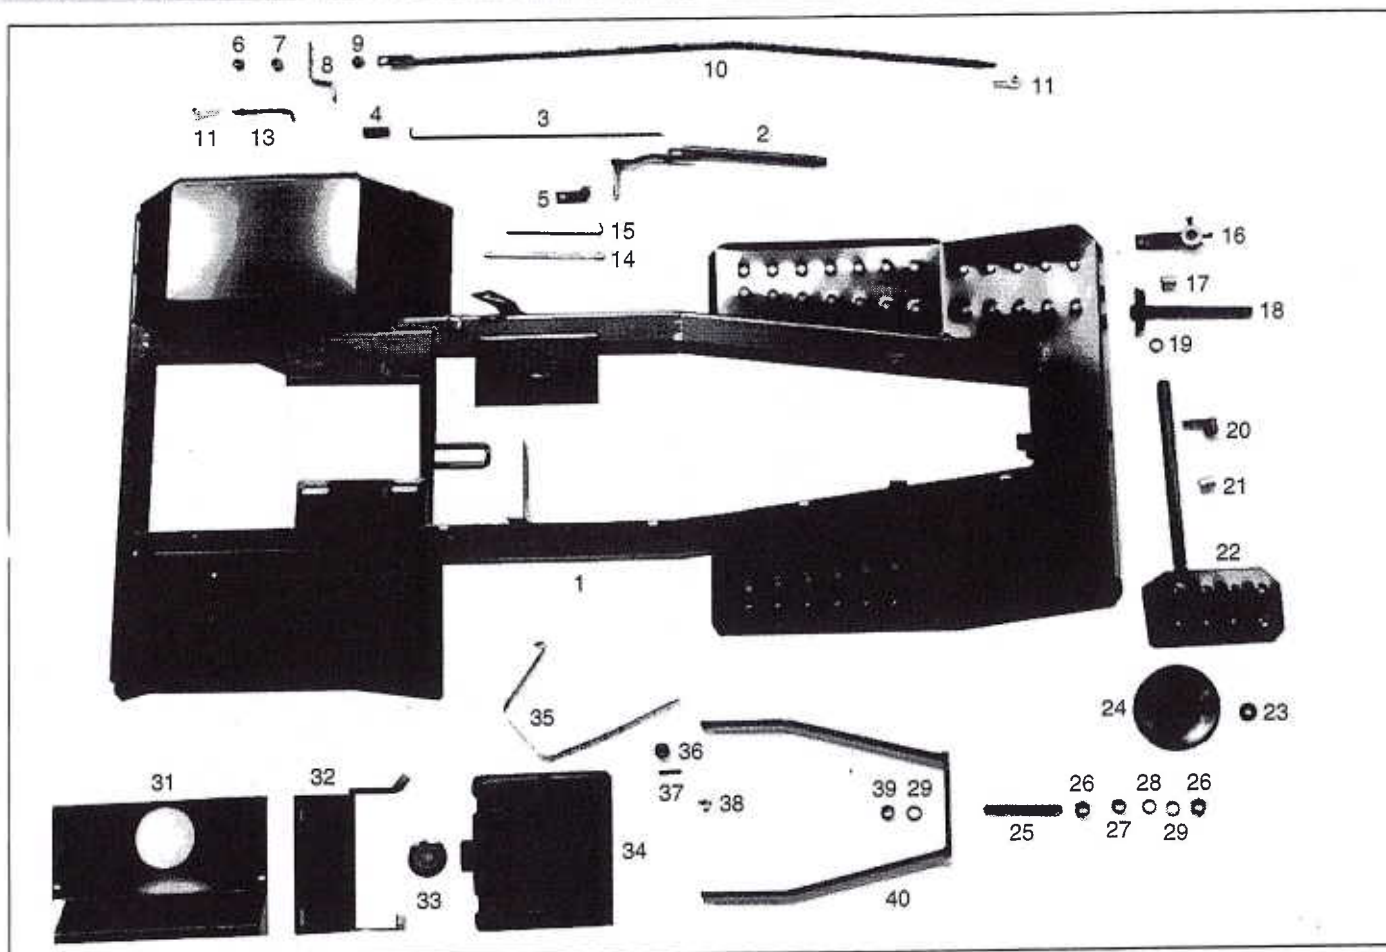


ILLUS.	DESCRIPTION.	PART No.	ILLUS.	DESCRIPTION.	PART No.
1	Chassis	T580	23	Washer, Engine Mount x 4	T521
2	Hand Brake Assembly	T501	24	Engine Pulley	T200
3	Lever, Adjustment	T587	--	Key 1/4	RD126
4	Spring	Y03	25	Bolt, Adjustment	T509
5	Connector	T503	26	Nut, 5/8w	T510
6	Link Bush	T520	27	Pivot Bush	T508
7	Spacer Bush	T589 ✕	28	Washer, Pivot Bush	T527
8	Link	T157	29	Spring Washer, 5/8	HD124
9	Link Bush	T520	30	Nut, 5/8w	T510
10	Speed Rod - Long	T517	31	Cover, Fan	T504
11	Ball Joint 5/16	T516	32	Bracket, Tank Mount	T522
13	Rod, Adjustment	T156	33	Cap, Fuel Tank	R281
14	Battery Strap x 2	T505	34	Tank, Fuel	R280
15	Bolt, Battery Strap x 2	T506	35	Tank Strap x 2	R282
16	Drag Link	T528	36	Rollar x 2	H07
17	Bush x 2	R91	37	Pin x 2	H08
18	Steering Spindle & Gear	T513	38	Flanged Bush x 2	T511
--	Grease Nipple 45degree	R33	39	Nut, 5/8 unf	RD174
19	Washer	T589 ✕	40	A-Frame	T507
20	Link, Pedal	T584	--	Battery 606	T315
21	Bush x 2	T582	--	Decal, "Hot Exhaust"	T909
22	Pedal	T581			
--	Grease Nipple 1/4 Long	T524			

SUB-FRAME ASSEMBLY

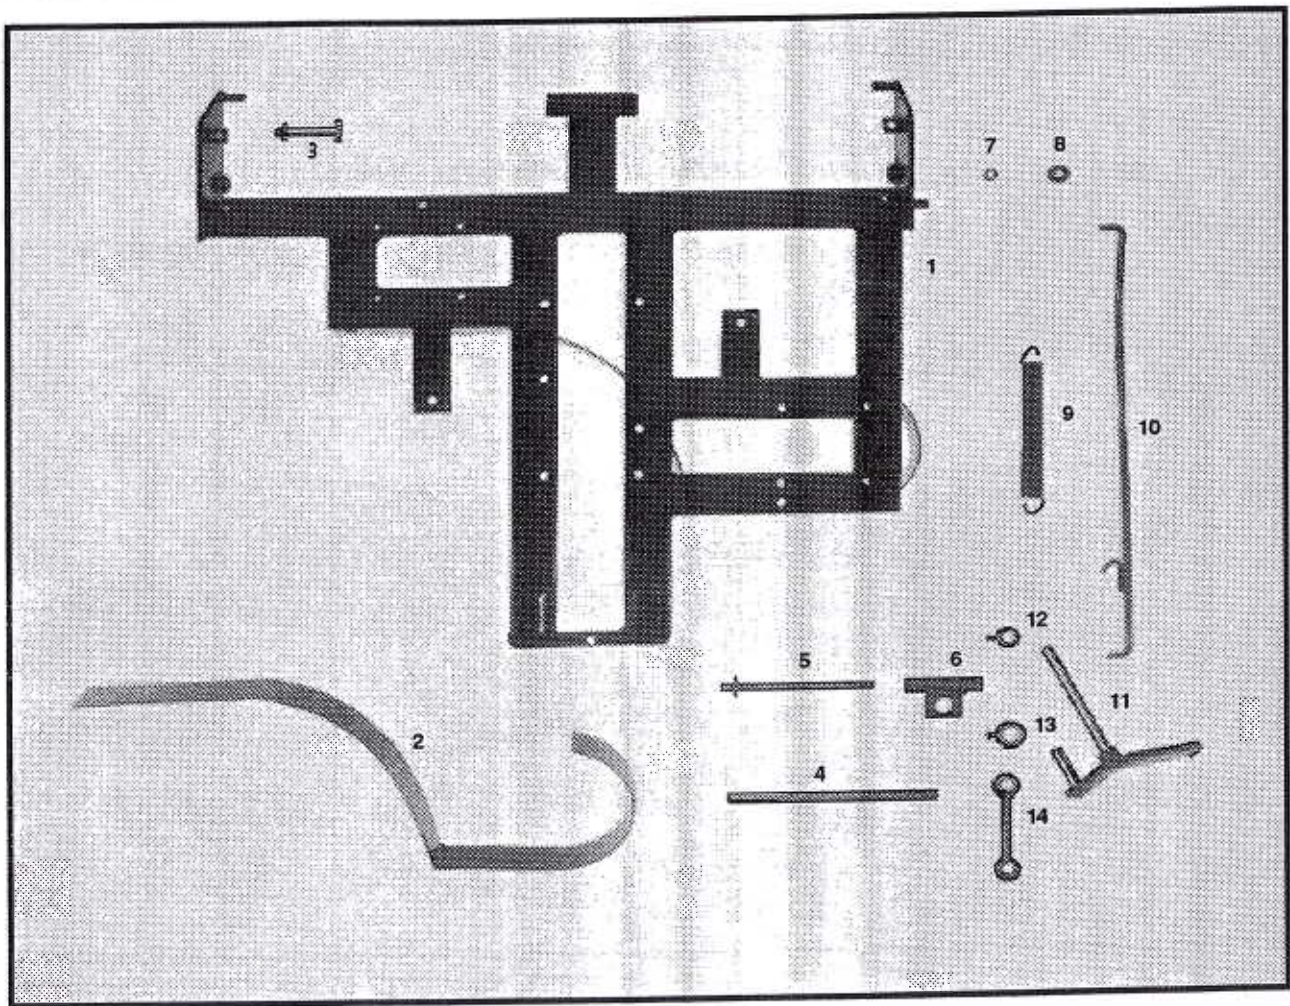


ILLUS	DESCRIPTION	PART No.	ILLUS	DESCRIPTION	PART No.
1	Sub Frame	T430	10	Rod, Conn.	T439
2	Deflector Plate	T431	11	Crank Arm	T440
3	Pivot Bolt & Lock Nut	T445	12	Collar 1/2"	H54
4	Pin 5/8"	T433	13	Collar 5/8"	T441
5	Link Pin	T434	14	Link Bracket	T442
6	Swivel Link	T435			
7	Bush, Crossbar x 2	T436			
8	Washer, Crossbar x 2	T437			
9	Spring	D50			

MAIN DECK

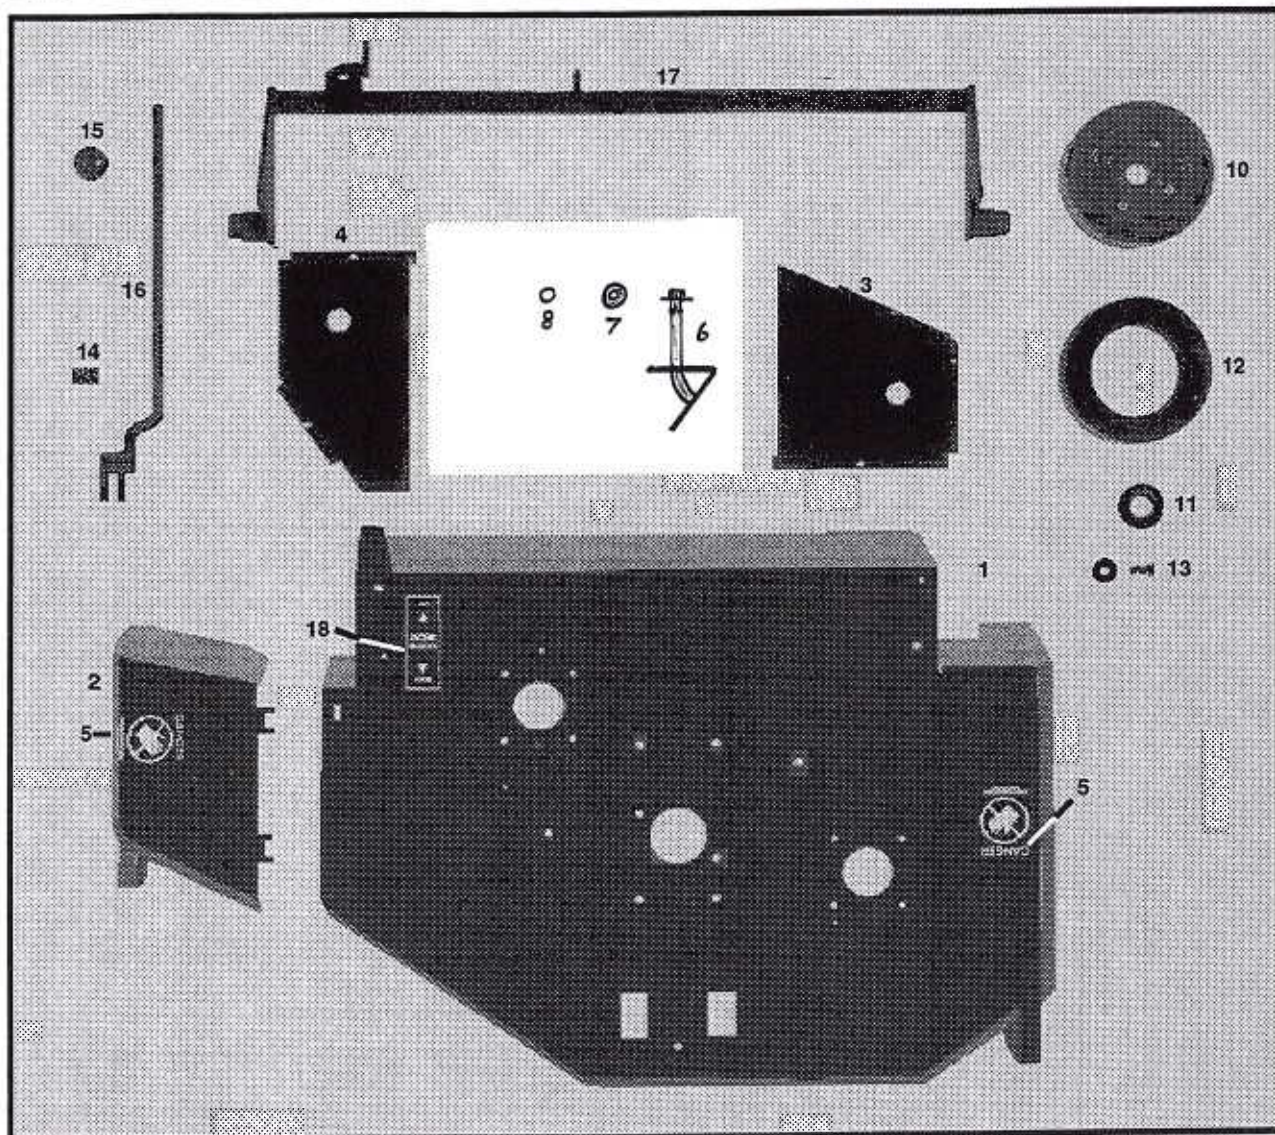


ILLUS	DESCRIPTION	PART No.	ILLUS	DESCRIPTION	PART No.
1	Main Deck	T400	10	Deck Wheel, Assembly x 2	MR50
2	Chute	T401	11	Bearing x2	MD18
3	Pulley Guard L.H.	T402	12	Tyre x 2	R57
4	Pulley Guard R.H.	T403	13	Bolt & Washer x 2	G02
5	Decal (Hands Free) x 2	T906	14	Spring	R87
6	Rear Mount Assembly	T411	15	Knob	Y13
7	Washer 2"	R77	16	Lever, Raise & Lower	T409
8	Spring Washer	HD124	17	Crossbar	T410
			18	Decal, (Raise & Lower)	T907

CLUTCH ASSEMBLY

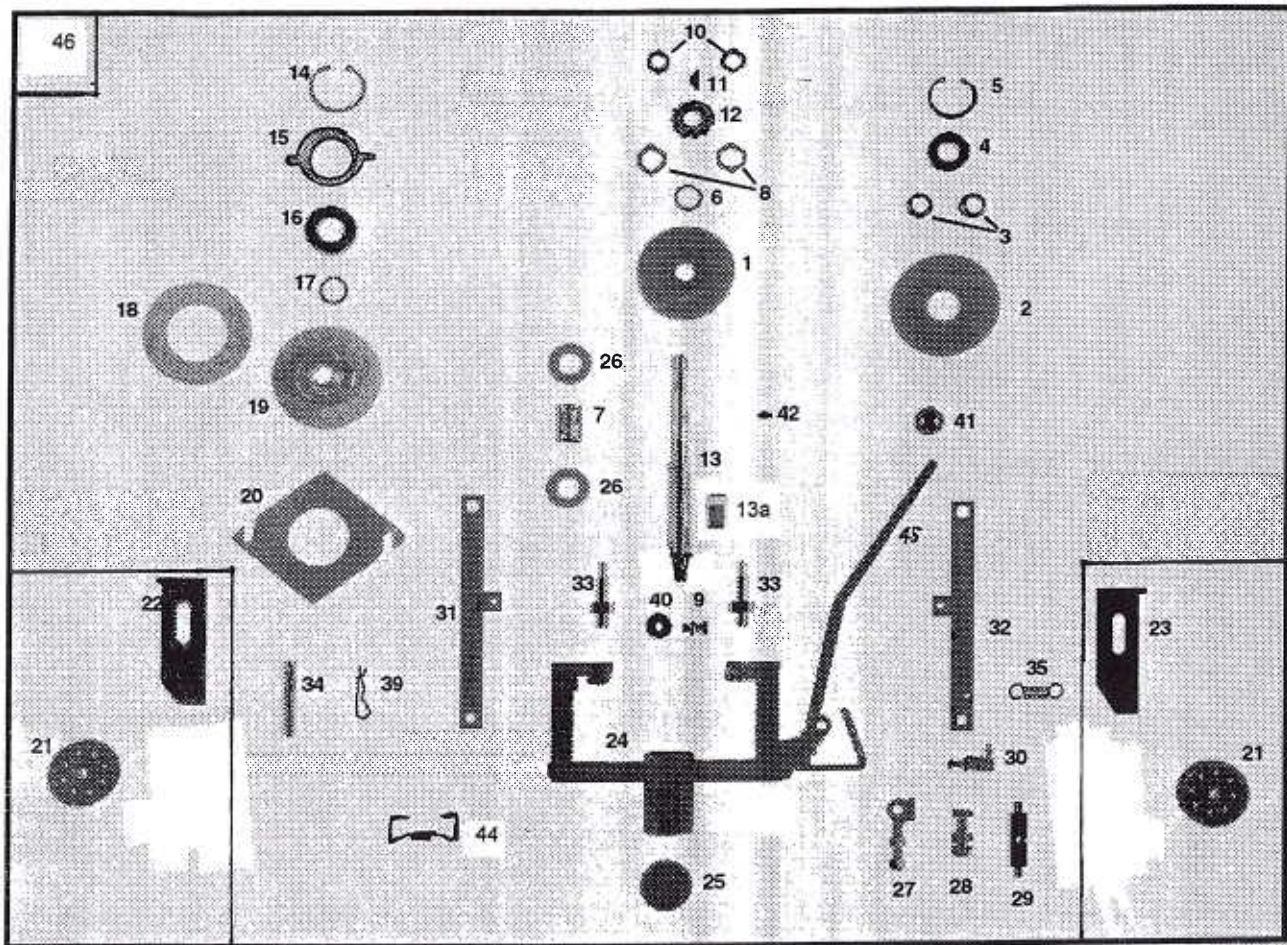


ILLUS.	DESCRIPTION	PART No.	ILLUS.	DESCRIPTION	PART No.
1	Double Pulley	T600	25	Cap, Bottom Housing	T622
2	Clutch Pulley	T601	26	Bearing, x 2	G33
3	Step Bush x 2	T602	27	Eye Bolt & Adjustor	T623
4	Clutch Bearing 6205	T603	28	Pivot Bolt 1.3/4"x1/2"	T624
5	Circlip 52mm int.	T604	29	Adjustment Block	T625
6	Seal Washer	T636	30	Safety Switch	T309
7#	Spacer Tube to s/n.1382	T606	31	Side Strap L.H.	T626
8	Lock Nut x 2	G30	32	Side Strap R.H.	T627
9#	Spring/w. & Bolt to s/n.1382	T607	33	Adjustment Stud x 2	T628
10	Lock Nut 3/4" unf.	T608	34	Pin	T629
11	Key, Woodruff 3/16"x5/8"	T609	35	Spring, Tension	T630
12	Clutch Drive Gear	T610	39	R-Clip x 4	T633
13	Main Spindle & Lock Nut	T638	40#	Washer to s/n.1382	DD111
13a	Lock nut	T639	41	Knob	Y13
14	Circlip 62mm int.	T612	42	Grease Nipple	R13
15	Bearing Holder	T613	44	Belt Guide	T634
16	Bearing 6206	T614	45	Lever	T635
17	Circlip 30 mm ext.	RD105	--	Bolt & Nut, Pulley Adj.	T642
18	Clutch Lining	T615	--	Lever, Blade Engagement	T635
19	Clutch Plate & Lining	T616	--	V-Belt, Engine-Centre Spindle	Y41
20	Brake Plate	T617	46	Clutch Assembly	T650
21	Jockey Pulley x 2	T618			
22	Bracket, L.H. Pulley	T640			
23	Bracket, R.H. Pulley	T641			
24	Main Housing & Lever	T621			
			#	Parts not required with replacement Main Spindle	

SPINDLE ASSEMBLY

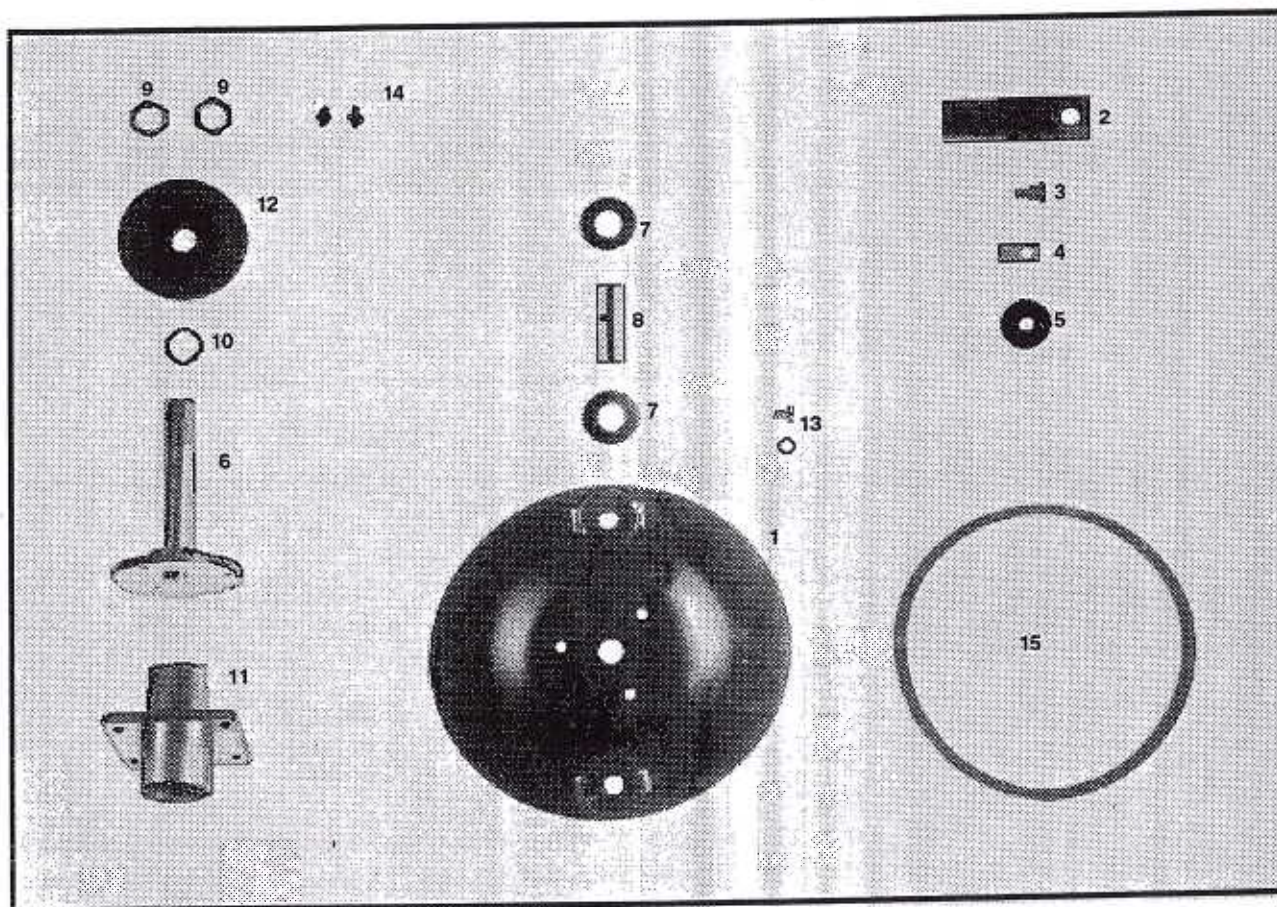


ILLUS	DESCRIPTION	QTY.	PART No.
1	Blade Plate	2	R32
2	Blade	4	R01
3	Bolt	4	D02
4	Nut	4	D03
5	Washer	4	D04
6	Spindle & Flange	2	T450
7	Bearing, (6205)	4	R28
8	Sleeve	2	T451
9	Lock Nut	4	G30
10	Washer	2	T452
11	Housing	2	T453
12	Pulley	2	T454
13	Bolt & Spring Washer	6	G36
14	Grease Nipple	2	R13
15	V-Belt, Dayco B32, Super 11	2	T432

SEAT & COVER

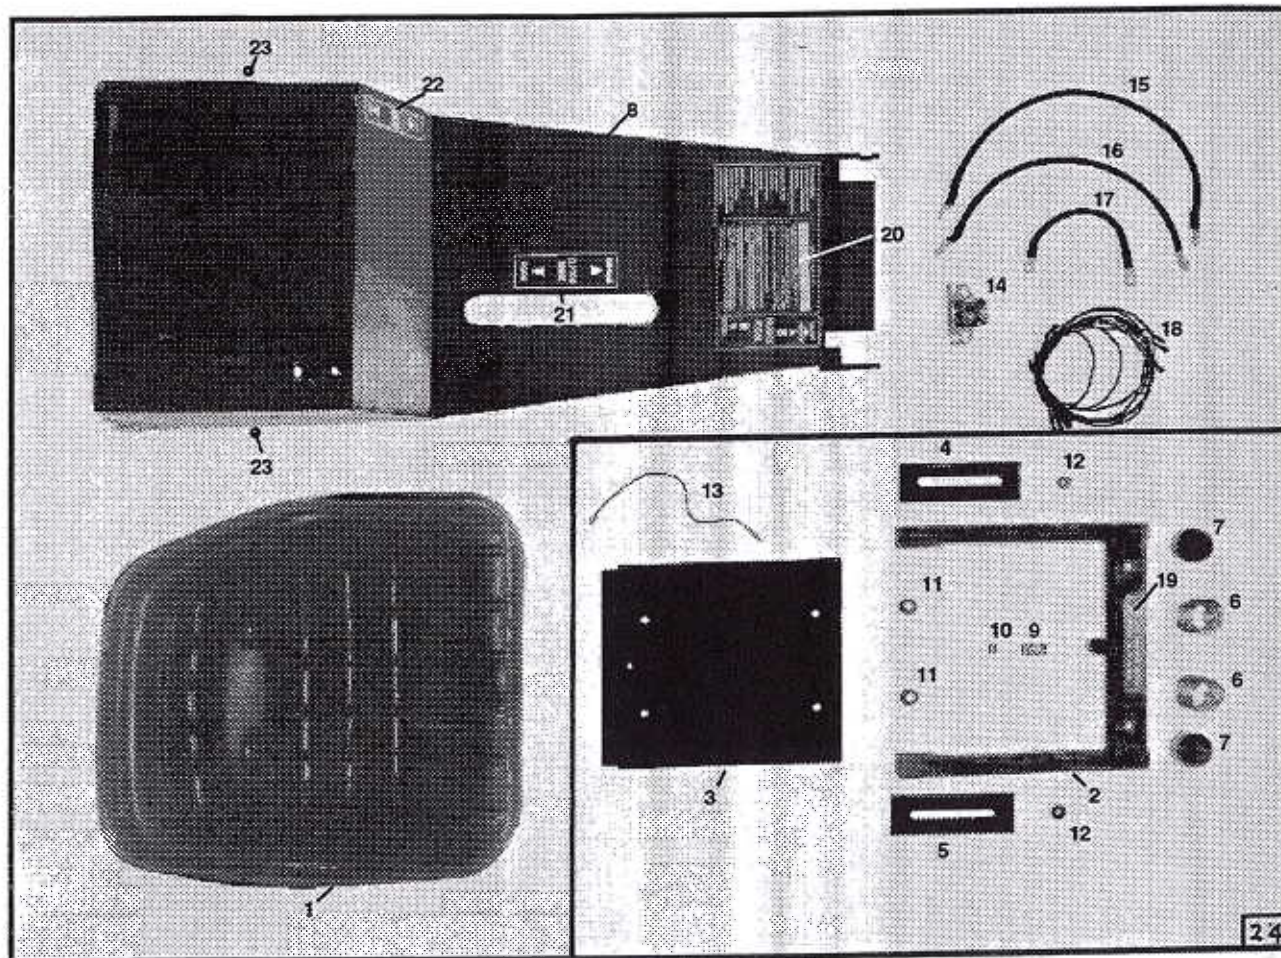


ILLUS	DESCRIPTION	PART No.	ILLUS	DESCRIPTION	PART No.
1	Seat	T530	14	Solenoid, (B&S)	T302
-	Back Rest, (Optional)	T541	15	Starter Cable 560mm (B&S)	T303
2	Seat Frame	T531	16	Battery Cable 460mm (B&S,H)	T304
3	Seat Base	T532		Battery Cable 330mm (H)	R323
4	Hinge Bracket L.H.	T533	17	Battery Cable 230mm (B&S)	R313
5	Hinge Bracket R.H.	T534	18	Wire Loom (B&S)	T305
6	Seat Spring x 2	T535		Wire Loom (H)	T306
7	Spring Cap x 2	T536	19	Decal, Seat Wire	T901
8	Seat Panel	T537	20	Decal, Starting Instructions	T902
9	Spring, Switch	D134	21	Decal, Cutter Engagement	T903
10	Insulator	T300	22	Decal, Park Brake	T904
11	Pivot Bush x 2	T538	23	Decal, Deutscher, Side Panel	T953
12	Adjustment Bolt x 2	T540	24	Seat Frame Assembly	T539
13	Wire Seat Switch	T301			

STEERING & FRONT END ASSEMBLY

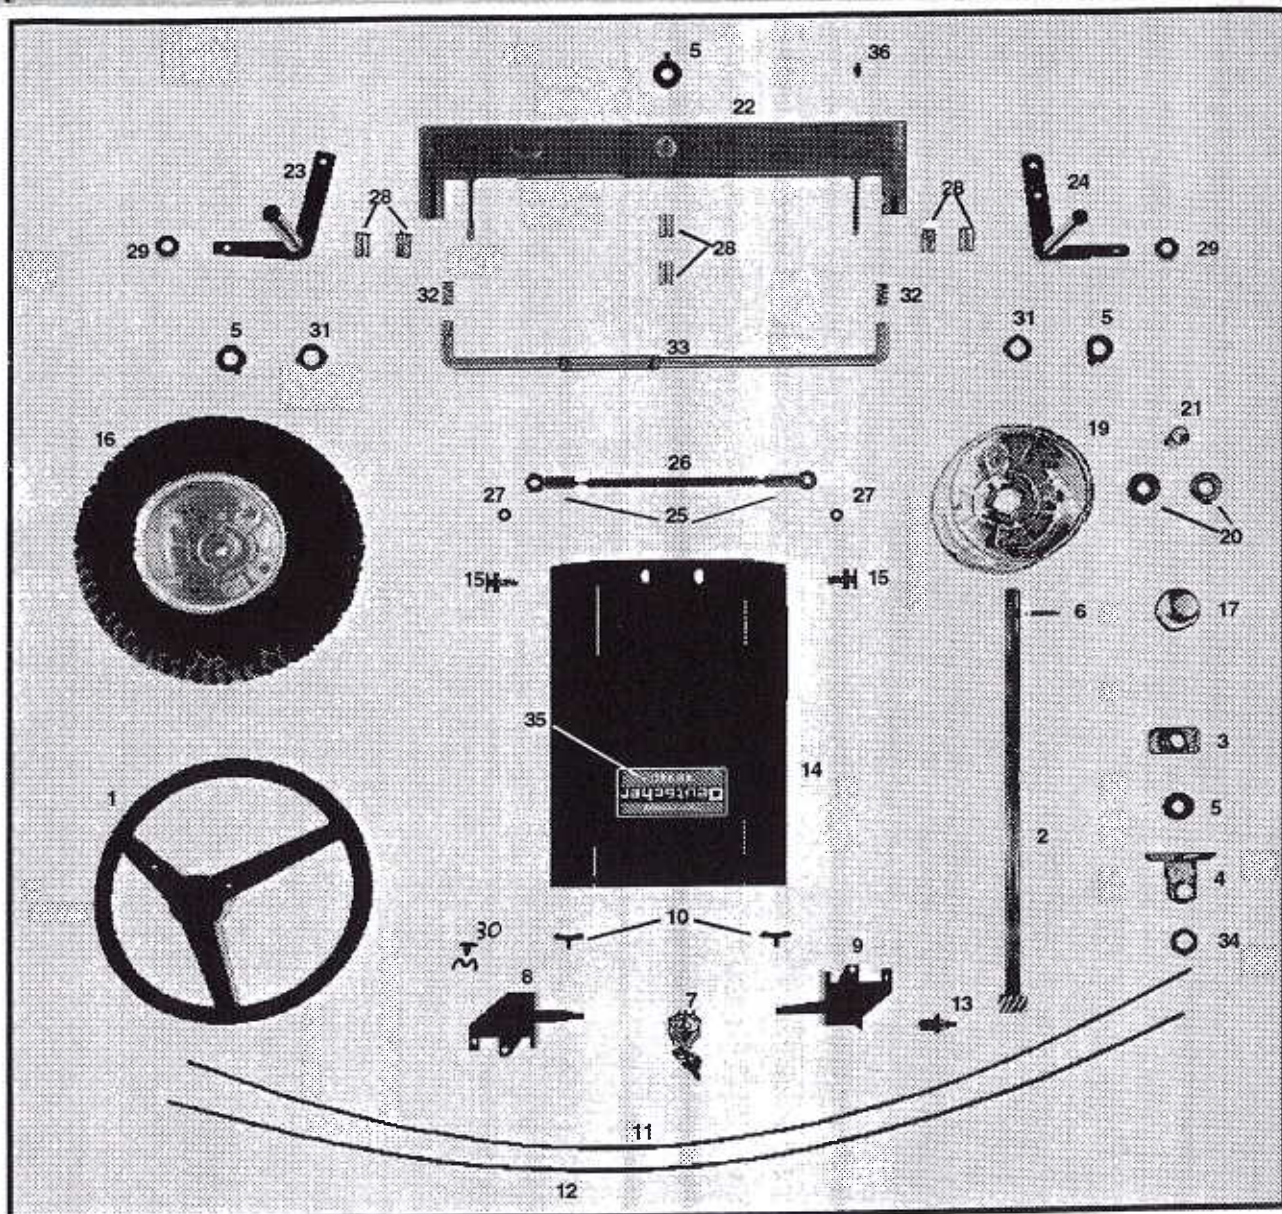

ILLUS.	DESCRIPTION	PART No.	ILLUS.	DESCRIPTION	PART No.
1	Steering Wheel	T550	20	Bearing, Wheel, 6203.2NSE	T588
2	Steering Column & Gear	T551	21	Spacer	H514
3	Top Bearing	T552	22	Front Axle Beam	T566
4	Bottom Bearing	T553	23	King Pin L.H.	MR90
5	Collar	R92	24	King Pin R.H.	MR95
6	Roll Pin	T554	25	Ball End, 3/8" UNF x 2	T567
7	Key Switch	T316	26	Front Tie Rod	T568
8	Throttle Lever Assembly	T655 T574	27	Spacer Washer	T569
9	Trans. Lever	T574	28	Bush x 6	R91
10	T-Knob x 2	T557	29	Nut 5/8" UNF	RD174
11	Cable, Universal, Throttle	T558	30	Cable Clamp	T572
12	Cable, Universal, Transaxle	T558	31	Thrust Washer	R93
13	Safety Switch	T309	32	Tie Rod Spring	R87
14	Panel	T560	33	Rear Tie Rod	T570
15	Hinge Pin x 2	T561	34	Hardened Washer	T571
16	Wheel Complete with T & T	T562	35	Decal, Steering Panel	T954
--	Tyre 13-500-6	T563	36	Grease Nipple	R13
--	Tube 13-500-6 TR87	T564	--	Decal, Trans. Lever	T910
17	Wheel Cap	R100	--	Decal, Key Start	T911
19	Wheel Rim, C/W. Bearings	T565	--	Decal, Throttle Lever	T912
			--	Clamp, Inner Wire	T573

TRANSAXLE

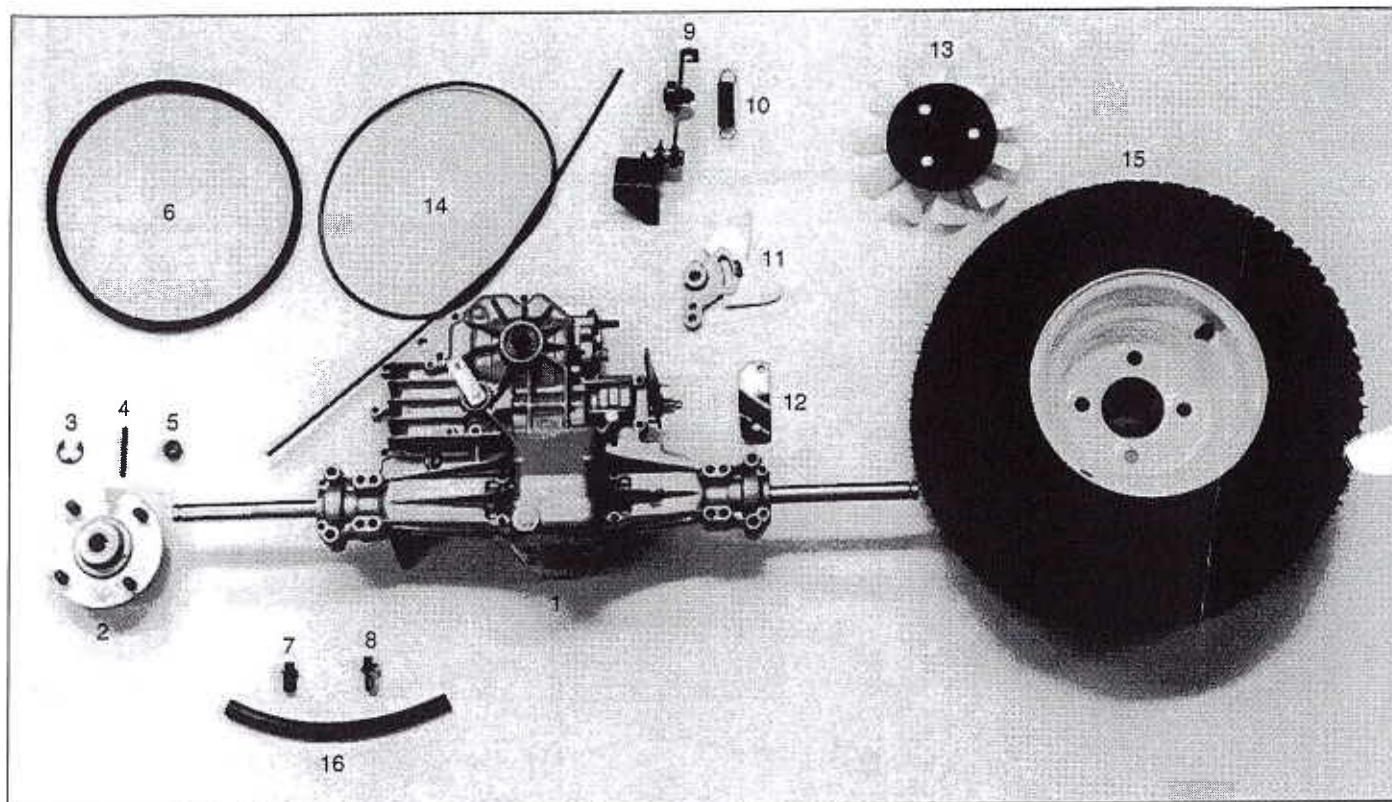

1715070

ILLUS.	DESCRIPTION.	PART No.	ILLUS.	DESCRIPTION.	PART No.
1	Hydro-Gear IHT310-0800	T150	14	Cable	T558
-	Bolt & Nut, Trans. Mount	T151	15	Wheel Assy. Turf	T112
2	Hub	T152	-	Rim	T113
3	Circlip	T153	-	Tyre, Turf 18-850-8	T114
4	Key 3/16"	T154	-	Tube, 18-850-8	T115
5	Wheel Nut x 8	T108	-	Wheel Assy. Knobby	T136
6	V-Belt, A32	T155	-	Tyre, Knobby 18-950-8	T137
7#	Cap Vent Assy.	70109	16	Hose, Breather	T161
8#	Fitting, O-Ring Assy.	70110			
9	Neutral Lever & Bracket Assy	T164			
10	Spring	Y03			
11	Control Arm & Cam	T165			
12	Plate, Park Brake Engag.	T158			
13#	Pulley	50302			
-- #	Fan	50307 HG			

$\frac{1}{2}'' + \frac{3}{8}''$
T1140

Note :- Parts marked are to be sourced from your local Briggs & Stratton Authorised Dealer.